



0425 Lubricating system - Oil sump, oil filter (2001 - 2010), B205, B235 Ch. 13056871--

Pos	Part No.	Article	Usage	Qty
1	91 89 531	Intermediate section	NLS-USE 55559823	1
2	83 48 609	•Junction pipe		1
3	46 85 368	•Stud		1
5A	91 81 736	•Thermostat	NLS-USE 5958848	1
		Note: Engine --2054255		
6	91 81 744	•Spring	NLS-USE 5958848	1
		Note: Engine --2054255		
7	91 81 934	•Plug	NLS-USE 5958848	1
		Note: Engine --2054255		
5	59 58 848	•Thermostat		1
		Note: Engine 2054256--		
6	93 00 591	••Spring		1
		Note: Engine 2054256--		
7	75 20 372	••Plug		1
		Note: Engine 2054256--		
8	91 09 182	•Gasket	NLS-USE 30520353	1
		Note: Engine --3022411		
8	59 59 879	•Gasket		1
		Note: Engine 3022412--		
9	11 900 367	Screw		4
10	59 55 307	Sump	B235R, M, NLS-USE 55559827	1
		Note: Ch. --23048514		
11	93 99 593	•Sump	B235R, M	1
		Note: Not as separate spare part.		
		Ch. --23048514		
12	91 75 662	•Oil pipe	B235R, M	1
		Note: Ch. --23048514		
10	59 55 273	Sump	NLS-USE 55559827	1
		Note: Ch. 13056871--		
10	55 559 827	Oil pan		1
11	91 92 535	•Sump	NLS-USE 55559827	1
		Note: Not as separate spare part.		
		Ch. 13056871--		
12	91 75 662	•Oil pipe		1
		Note: Ch. 13056871--		
13	91 37 993	O-ring		2
14	92 150 014	Screw		18
14	92 150 014	Screw	B235R	17
		Note: Ch. --23048514		
14	80 84 071	Screw	B235R	1
		Note: Ch. --23048514		
14A	80 29 985	Washer	B235R, NLS-USE 92153033	1
		Note: Ch. --23048514		
15	91 75 696	Tube		1
16	91 38 009	O-ring		1
17	79 71 294	Screw		6
18	91 32 929	Plug		1
19	91 32 937	Gasket		1
20	30 569 900	Baffle plate	2001-2005, NLS-USE 55557228	1
21	91 86 156	Oil pipe	2001-2005, NLS-USE 55557225	1
22	93 186 554	Filter		1
26		Bracket	Goto 2 - 640	
27	92 150 002	Screw	NLS-USE 11900354	2
28	55 561 216	Pipe		1
29	91 38 108	•O-ring		1
30	91 72 271	Tube	NLS-USE 55559427	1
		Note: Engine --7006105		
30	55 559 427	Pipe		1
		Note: Engine 7006106--		
31	91 47 026	O-ring	2001-2005, NLS-USE 55355266	1
33	91 72 305	Dipstick	2001-2005, NLS-USE 55557302	1
34	93 61 544	•Ring gland	2001-2005, NLS-USE 55557303	1
35	91 76 660	Oil pressure sensor	2001-2005, NLS-USE 55559824	1
36		Pump kit	Goto 2 - 310	
37		Hose	Goto 2 - 1060	
38		Oil pump housing	Goto 2 - 310	
40	90 297 970	Flange sealant	50 ML	X
41	91 99 852	Cover	B235R, M, NLS-USE 30587699	1
42	91 99 860	Cover	B235R, M, NLS-USE 30587700	1